

use & care guide



ELECTRIC RANGE

Model
RF3000XV

Whirlpool offers a wide variety of home appliances including: Dishwashers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Trash Compactors.



Contents

	Page		Page
BEFORE YOU USE YOUR RANGE ..	2	Adjusting the Oven Temperature Control	14
IMPORTANT SAFETY INSTRUCTIONS	3	The Oven Vent	15
PARTS AND FEATURES	5	CARING FOR YOUR RANGE	16
USING YOUR RANGE	6	Control Panel and Knobs	16
Using the Surface Units	6	Surface Units and Reflector Bowls	17
Home Canning Information ..	8	Lift-Up Cooktop	19
Baking or Roasting	9	The Oven Door	19
Setting the Oven Controls ..	9	The Lower Panel	20
How To Position Racks and Pans	10	Standard Oven Cleaning	21
How To Use Aluminum Foil for Baking	11	Cleaning Chart	21
Broiling	12	IF YOU NEED SERVICE OR ASSISTANCE	22
Setting the Oven Controls ..	12	WHIRLPOOL RANGE WARRANTY	24
Custom Broil	13		
Broiling Tips	13		

©1990 Whirlpool Corporation

Before you use your range

You are responsible for:

- Reading and following all safety precautions in this Use and Care Guide.
- Installing and leveling the range on a floor strong enough to support its weight, and where it is protected from the elements. (See the Installation Instructions.)
- Making sure the range is not used by anyone unable to operate it properly.
- Properly maintaining the range.
- Using the range only for jobs expected of a home range.
- Making sure the range is secured by a properly installed anti-tip bracket, with a rear leveling leg positioned under bracket.

Remove the Consumer Buy Guide label. It will be easier to remove before the range is used. To remove any remaining glue:

- Rub briskly with thumb to make a ball, then remove.
- or
- Soak area with liquid hand dishwashing detergent before removing glue as described above.

Do not use sharp instruments, rubbing alcohol, flammable fluids or abrasive cleaners. These can damage the finish. See "Important Safety Instructions" on page 3.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the range, follow basic precautions, including the following:

- Read all instructions before using the range.
- Install or locate the range only in accordance with the provided Installation Instructions. It is recommended that the range be installed by a qualified installer. The range must be properly connected to electrical supply and grounded.



- To reduce the risk of tipping of the appliance, the appliance must be secured by a properly installed anti-tip bracket. To check if the bracket is installed properly, remove the lower panel (see page 20) and verify that the anti-tip bracket is engaged.
- Do not use the range for warming or heating the room. Persons could be burned or injured, or a fire could start.
- Do not leave children alone or unattended in area where the range is in use. They should never be allowed to sit or stand on any part of the range. They could be burned or injured.
- Do not wear loose or hanging garments when using the range. They could ignite if they touch a hot surface unit or heating element and you could be burned.
- Do not repair or replace any part of the range unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Do not store flammable materials in or near the range. They could explode or burn.
- Do not use water on grease fires.

Never pick up a flaming pan. Smother flaming pan on cooktop by covering with a well-fitted lid, cookie sheet or flat tray. Flaming grease outside of pan can be extinguished with baking soda or, if available, a multipurpose dry chemical or foam-type extinguisher.

- Use only dry potholders. Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholder touch hot heating elements. Do not use a towel or bulky cloth for a potholder. They could catch on fire.
- Select a pan with a flat bottom that is about the same size as the surface unit. If pan is smaller than the surface unit, some of the heating element will be exposed and may result in the igniting of clothing or potholders. Correct pan size also improves cooking efficiency.
- Never leave surface units unattended at high heat settings. A boil-over could result and cause smoking and greasy spill-overs that may ignite.
- Make sure the reflector bowls are in place during cooking. Cooking without reflector bowls may subject the wiring and components underneath them to damage.
- Do not line reflector bowls with aluminum foil or other liners. Improper installation of these liners may result in a risk of electric shock or fire.
- Check to be sure glass cooking utensils are safe for use on the cooktop. Only certain types of glass, glass-ceramic, ceramic, earthenware or other glazed utensils are suitable for cooktops without breaking due to the sudden change in temperature.

continued on next page

- Turn pan handles inward, but not over other surface units. This will help reduce the chance of burns, igniting of flammable materials, and spills due to bumping of the pan.
- Do not soak removable heating elements in water. The element will be damaged and shock or fire could result.
- Use care when opening oven door. Let hot air or steam escape before removing or replacing food.
- Do not heat unopened containers. They could explode. The hot contents could cause burns and container particles could cause injury.
- Keep range vents unobstructed.
- Always position oven rack in desired location while oven is cool. If rack must be moved while oven is hot, do not let potholder contact hot heating element in oven.
- Do not clean door seal. It is essential for a good seal. Care should be taken not to rub, damage, or move the seal. Clean only parts recommended in this Use and Care Guide.
- Do not store things children might want above the range. Children could be burned or injured while climbing on it.
- Do not touch surface units, areas near units, heating elements or interior surfaces of oven. Surface units and heating elements may be hot even though they are dark in color. Areas near surface units and interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact surface units, areas near units, heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the range may become hot enough to cause burns; such as, the oven vent opening, the surface near the vent opening, the cooktop, and the oven door.

• FOR YOUR SAFETY •

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.

– SAVE THESE INSTRUCTIONS –

Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product. Then complete the form below. Have this information ready if you need service or call with a question.

- Copy model and serial numbers from plate (behind the oven door on the oven frame) and purchase date from sales slip.
- Keep this book and the sales slip together in a handy place.

Model Number



Serial Number

Purchase Date

Service Company Phone Number

Parts and features


Model RF3000XV

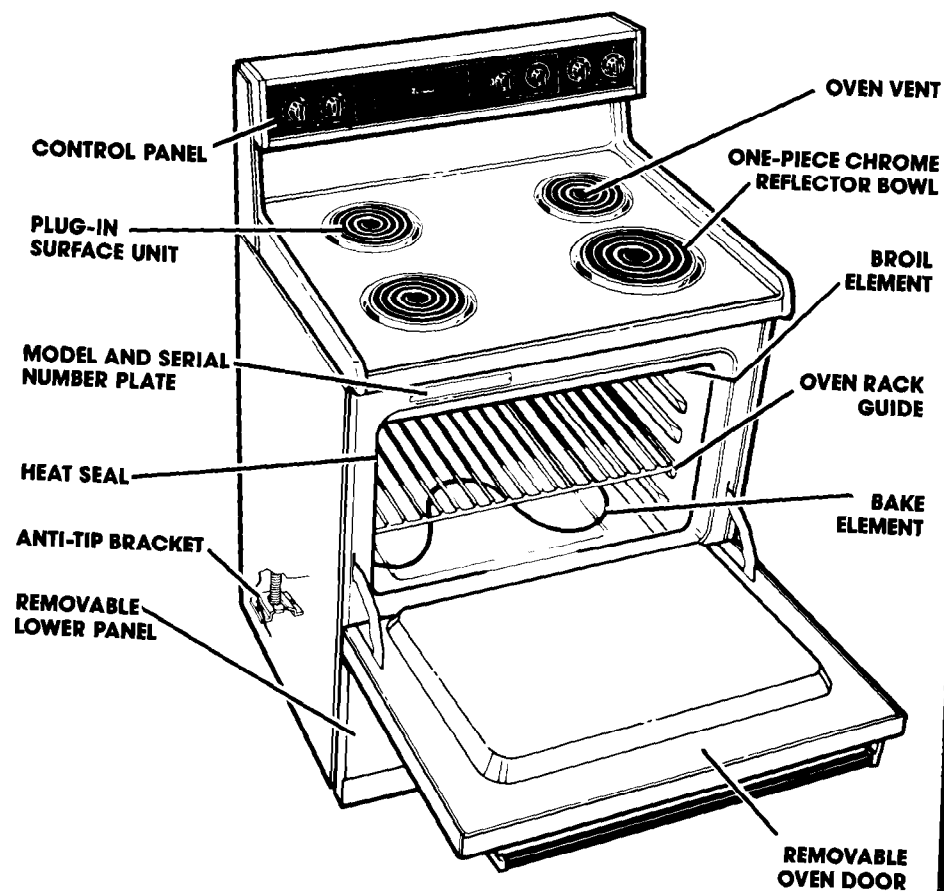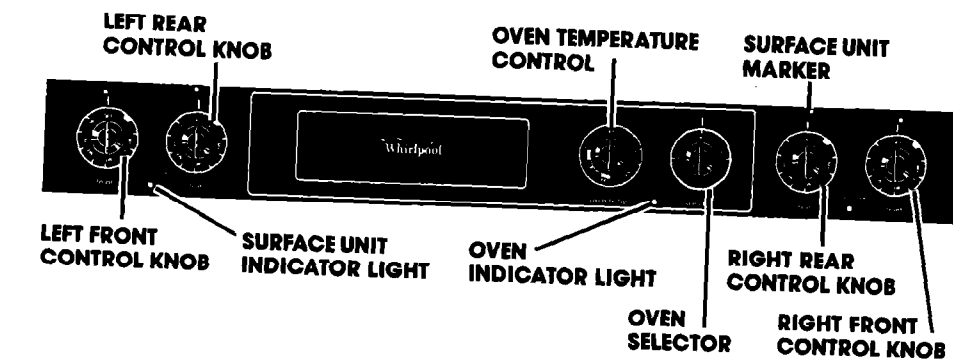

IMPORTANT SAFETY INSTRUCTIONS • PARTS AND FEATURES

Using your range

Using the Surface Units

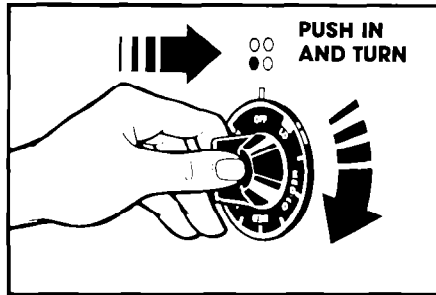

Control knobs must be pushed in before turning them to a setting. They can be set anywhere between HI and OFF.

Surface Unit Markers

The solid dot in the surface unit marker shows which surface unit is turned on by that knob.

Surface Unit Indicator Lights

One of the surface unit indicator lights on the control panel will glow when a surface unit is on.

⚠ WARNING

Burn and Fire Hazard

Be sure all control knobs are turned to OFF and all indicator lights are OFF when you are not cooking. Someone could be burned or a fire could start if a surface unit is accidentally left ON.

Until you get used to the settings, use the following as a guide. For best results, start cooking at the high settings; then turn the control knob down to continue cooking. Turn on the surface unit only after placing filled pan on unit.

Use HI to start foods cooking; to bring liquids to a boil.

Use MED-HI to hold a rapid boil; to fry chicken or pancakes.

Use MED for gravy, puddings and icing; to cook large amounts of vegetables.

Use MED-LO to keep food cooking after starting it on a higher setting.

Use LO to keep food warm until ready to serve. Set the heat higher or lower within the LO band to keep food at the temperature you want.

Cookware

There is no one brand of utensil that is best for all people. Knowing something about pan materials and construction will help you select the right cooking utensils for your needs.

1. Use only flat-bottomed utensils that make good contact with the surface units. To check the flatness of a utensil:
 - Turn it over and check the bottom of the pan by placing a ruler across it.
 - Rotate the ruler in all directions. There should be no gaps between the pan and the ruler.
2. The pan should have straight sides and a tight-fitting lid.
3. Choose medium to heavy gauge (thickness) pans that are fairly lightweight. Remember that a very heavy pan will be even heavier when filled with food.
4. The pan material (metal or glass) affects how fast heat transfers from the surface unit through the pan material and how evenly heat spreads over the pan bottom.
5. Handles should be made of a sturdy, heat-resistant material and be securely attached to the pan.

⚠ WARNING

Burn, Personal Injury and Product Damage Hazard

- If the pan is too small for the surface unit, you could be burned by the heat from the exposed section of the surface unit. Use correctly sized cooking utensils to prevent injury.
- Not all glass, glass-ceramic, ceramic, earthenware and other glazed utensils are safe for cooktop cooking. Some will crack or break with sudden temperature changes, which could result in personal injury.
- If a surface unit stays red for a long time, the bottom of the pan is not flat enough or is too small for the surface unit. Prolonged usage of incorrect utensils for long periods of time can result in damage to the surface unit, cooktop, wiring and surrounding areas. To prevent damage, use correct utensils, start cooking on HI and turn control down to continue cooking.
- Do not leave an empty utensil, or one which has boiled dry, on a hot surface unit. It can overheat and may damage the utensil or surface unit.
- Do not use canners, woks and specialty utensils with rounded, warped, ridged or dented bottoms. These could cause severe overheating which damages the utensil and/or surface unit.

Home Canning Information

To Protect Your Range:

- 1.** Use flat-bottomed canners for best results. Do not use canners with dented or ridged (porcelain enamel-ware) bottoms. They do not make good contact with the surface unit and cause severe over-heating which damages the cooktop.
- 2.** For best results, use a canner which can be centered over the surface unit. Large diameter canners, if not properly centered, trap heat and can cause damage to the cooktop.
- 3.** Do not place canner on two surface units at the same time. Excessive heat build-up will damage the cooktop.
- 4.** Alternate surface units. This allows the surface units to cool down between batches.
- 5.** Start with hot water. This reduces the time the control is set on high. Reduce heat setting to lowest position needed to keep water boiling.
- 6.** Keep reflector bowls clean for best heat reflection.
- 7.** To prolong the life of the elements:
 - Prepare small batches at a time.
 - Do not use elements for canning all day.


Optional Canning Kit (Part No. 242905)

The large diameter of most water-bath or pressure canners combined with high heat settings for long periods of time can shorten the life of regular surface units and cause damage to the cooktop.


If you plan to use the cooktop for canning, we recommend the installation of a Canning Kit. Order the kit from your Whirlpool dealer or authorized WhirlpoolSM service company.

Baking or Roasting


Setting the Oven Controls

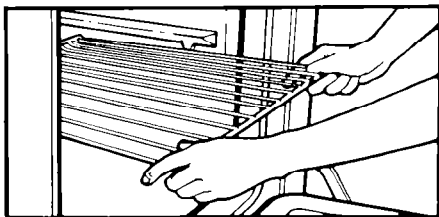

1. Position the rack properly **before** turning on the oven. **To change rack position**, lift rack at front and pull out. For information on positioning rack, see "How To Position Rack and Pans" on page 10.

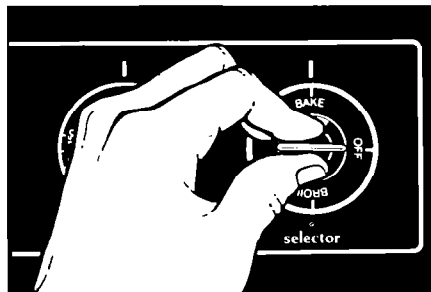


2. Set the Oven Selector to BAKE.

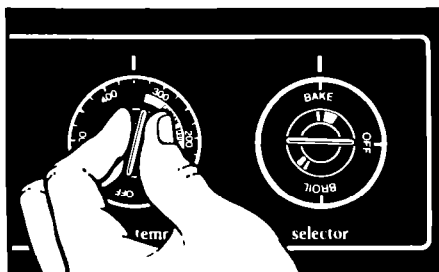


3. Set the Oven Temperature Control to the baking temperature you want. The Oven Indicator Light will come on. The oven is preheated when the Oven Indicator Light first goes off.

NOTE: Do not preheat oven when roasting or cooking items such as casseroles.

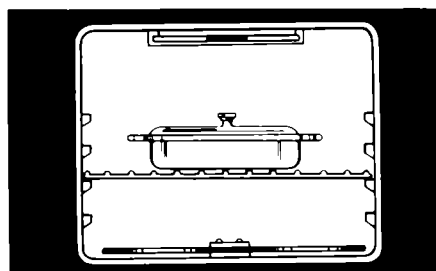

4. Put food in the oven. During baking, the elements will turn on and off to keep the oven temperature at the setting. The Oven Indicator Light will turn on and off with the elements.

The top element helps heat during baking, but does not turn red.

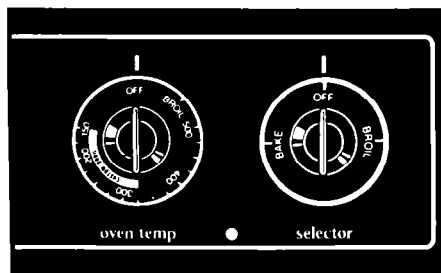

5. When baking is done, turn **both** the Oven Selector and Oven Temperature Control to OFF.

How To Position Rack and Pans

The rack should be placed so the top of the food will be centered in the oven. Always leave at least 1½ to 2 inches (4-5 cm) between the sides of the pan and the oven walls and other pans.

For proper cooking, follow these guidelines for specific foods:

- Angel and bundt cake pans, yeast breads, frozen pies, large roasts and turkeys – place rack on lowest level
- Casseroles, muffins, most quick breads and meats – place rack on second level from bottom
- Cookies, biscuits, cakes and non-frozen pies – place rack on second or third level from bottom

⚠ WARNING


Fire and Personal Injury Hazard

- **Always position oven rack in desired location before turning oven on. Be sure the rack is level.**
- **If rack must be moved while oven is hot, use potholders or oven mitts to protect hands.**
- **Do not let potholders or oven mitts contact hot heating elements.**
- **Always use a dry potholder or oven mitt to change rack or handle utensils in the oven. Do not use a damp potholder or oven mitt. Steam burns could result.**

Failure to follow the above precautions may result in fire or personal injury.

The hot air must circulate around the pans in the oven for even heat to reach all parts of the oven.

For Best Air Circulation:

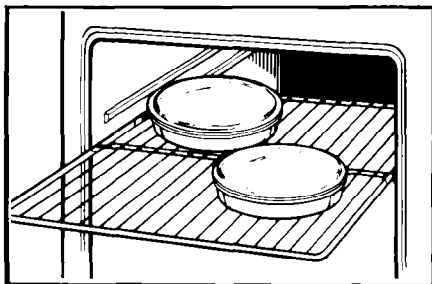

- Place the pans so that one is not directly over the other.
- Allow 1½-2 inches (4-5 cm) of space around each pan and between pans and oven walls.
- Use only one cookie sheet in the oven at one time.

Use the following as a guide to determine where to place the pans.

One Pan


Place in the center of the oven rack.

Two Pans

Place in opposite corners of the oven rack.

NOTE: "Oven peeking" may cause heat loss, longer cooking times and unsatisfactory baking or roasting results. Use a reliable kitchen timer to keep track of the cooking time.

How to Use Aluminum Foil for Baking:

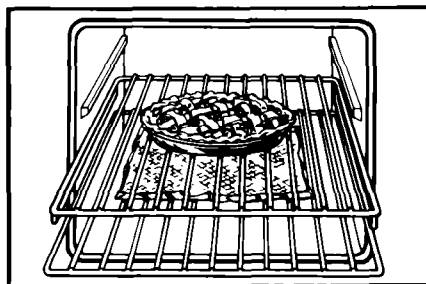

Use aluminum foil to catch spill-overs from pies or casseroles.

- Place the foil on the oven rack under the food. (This may, however, result in poor baking.) The foil should have the edges turned up and be about 1 inch (3 cm) larger all around than the dish holding the food.
- Do not cover the entire rack with aluminum foil. It will reduce air circulation and cause poor cooking results.

⚠ WARNING

Electrical Shock, Fire and Product Damage Hazard

- **Do not allow foil to touch the heating elements because it will damage them and could result in shock or fire hazard.**
- **Do not line Standard Oven bottoms with foil or other liners. Poor baking will result.**

Broiling


Setting the Oven Controls

A broiler pan and grid (Part Numbers 310976 and 258171) may be ordered from your Whirlpool Dealer.


⚠ WARNING

Fire Hazard


Always use a pan designed for broiling. The grid holds the food above the drippings and helps prevent excessive smoke and/or fire.

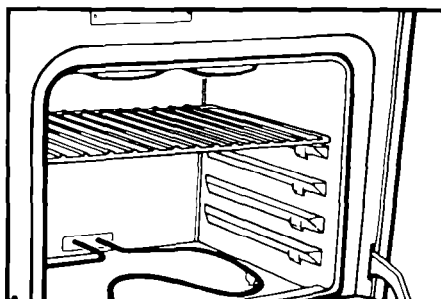

1. Position the rack properly **before** turning on the oven. The oven rack should be positioned so that the surface of the food is at least 3 inches (7.4 cm) away from the broil element.

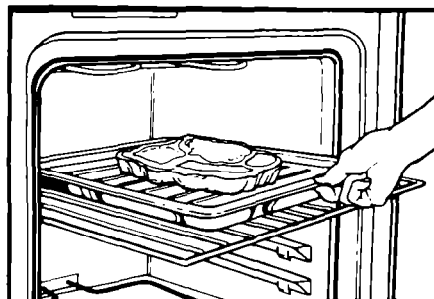


2. Put the broiler pan and food on the rack.

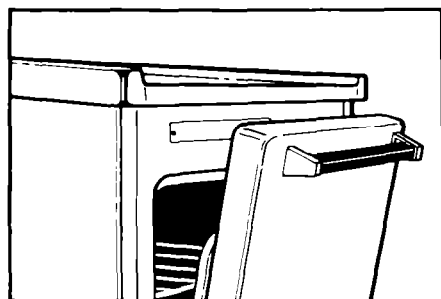

3. Close the door to the Broil Stop position (open about 4 inches, 10.2 cm). The door will stay open by itself.

NOTE: The door must be partly open whenever the oven is set to BROIL. Leaving the door open allows the oven to maintain proper temperatures.

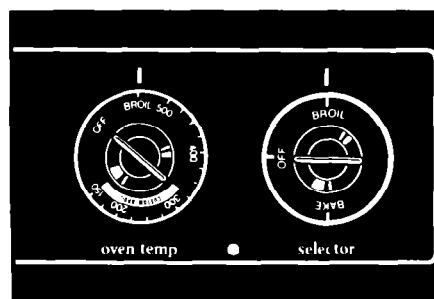

4. Set the Oven Selector and Oven Temperature Control to BROIL.

NOTE: Do not preheat oven when broiling.

5. When broiling is done, turn **both** the Oven Selector and Oven Temperature Control to OFF.

Custom Broil

- If food is cooking too fast, turn the Oven Temperature Control **counter-clockwise** until the Oven Indicator Light goes off.
- If you want the food to broil slower from the start, set the Oven Temperature Control between 150° and 325°F (65.5° and 162.7°C). The lower the temperature, the slower the cooking.

The Oven Selector must be on BROIL for all broiling temperatures.

Broiling Tips

- Use the broiler pan and grid for broiling. They are designed to drain excess liquid and fat away from the cooking surface to help prevent spatter, smoke or fire.
- Refer to a broiling chart in a reliable cookbook for correct broiling times.
- After broiling, remove the broiler pan from the oven when you remove the food. Drippings will bake on the pan if it is left in the heated oven.

WARNING


Fire Hazard

- **Place meat the correct distance from the element. Meat placed too close to the element may spatter, smoke, burn or catch fire during broiling.**
- **To ensure adequate grease drainage, do not use cookie sheets or similar pans for broiling. Also, covering the broiler grid with foil is not recommended. Poor drainage of grease may result in fire. If foil is used, cut slits in foil to correspond with all openings in broiler grid. Grease can then drain away and cool in pan.**


Adjusting the Oven Temperature Control

Does your oven seem hotter or colder than your old oven? The temperature of your old oven may have shifted gradually without your noticing the change. Your new oven is properly adjusted to provide accurate temperatures. But when compared to your old oven, the new design may give you different results.


If after using the oven for a period of time, you are not satisfied with the temperature settings, they can be adjusted by following these steps:

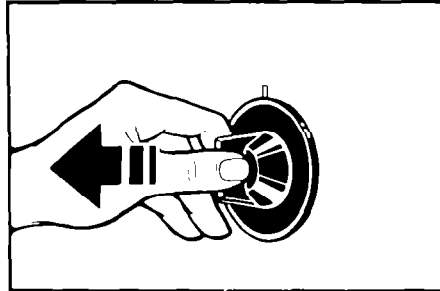


- 1.** Pull the Oven Temperature Control Knob straight off.

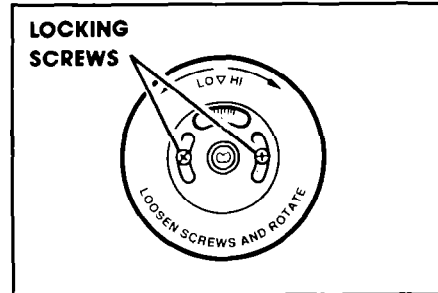

- 2.** Loosen the locking screws inside the control knob. **Note the position of the notches.**

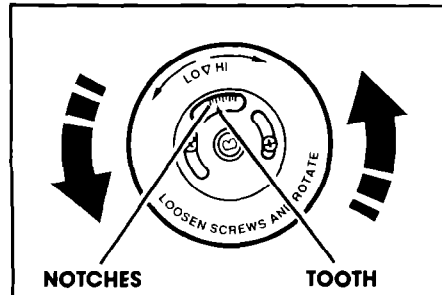

- 3.** To lower the temperature, move the tooth a notch closer to LO. Each notch equals about 10°F (5°C).

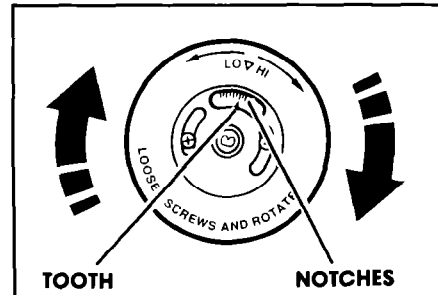

- 4.** To raise the temperature, move the tooth a notch closer to HI. Each notch equals about 10°F (5°C).

Tighten the locking screws and replace the control knob.

The Oven Vent


Hot air and moisture escape from the oven through a vent under the right rear surface unit. You can cook on the unit, or keep food warm on it while the oven is on.

⚠ WARNING

Burn Hazard

If you leave a utensil on the right rear surface unit, use potholders when moving it. Pan handles can become hot enough to burn.

Plastic utensils left over the vent can melt.

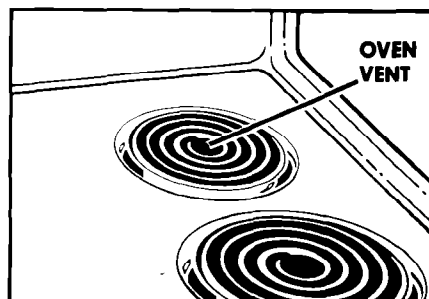

The vent is needed for air circulation. **Do not block the vent.** Poor baking can result.

Caring for your range

Control Panel and Knobs



⚠ WARNING

Burn and Electrical Shock Hazard

Make sure all controls are OFF and the range is cool before cleaning. Failure to do so can result in burns or electrical shock.

1. Turn control knobs to the OFF position.
2. Pull control knobs straight off.
3. Use warm soapy water or spray glass cleaner, and a soft cloth, to wipe the control panel. Rinse and wipe dry.
4. Wash control knobs in warm soapy water. Rinse well and dry. Do not soak.
5. Replace control knobs by pushing them firmly into place.

NOTE: When cleaning, never use steel wool, abrasives, or commercial oven cleaners which may damage the finish. After cleaning, make sure all control knobs point to the OFF position.


Surface Units and Reflector Bowls

Removing


⚠ WARNING

Burn and Electrical Shock Hazard
Make sure all surface units are OFF before removing surface units and reflector bowls. Failure to do so can result in burns or electrical shock.


CARING FOR YOUR RANGE

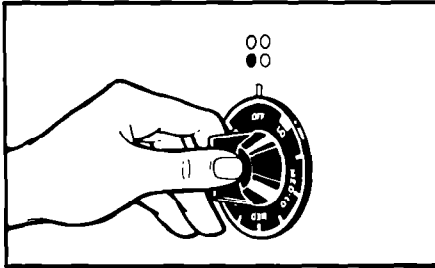


1. Turn off all surface units.

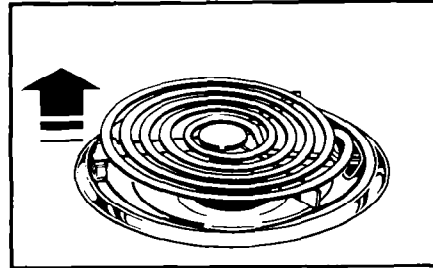

2. Lift the edge of the unit, opposite the receptacle, just enough to clear the element hold down clip and the reflector bowl.

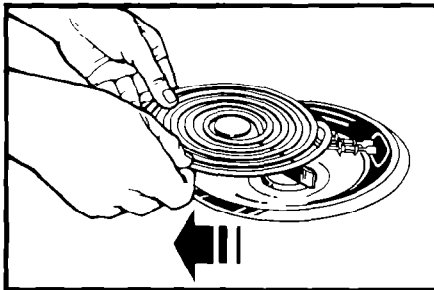

3. Pull the surface unit straight away from the receptacle.

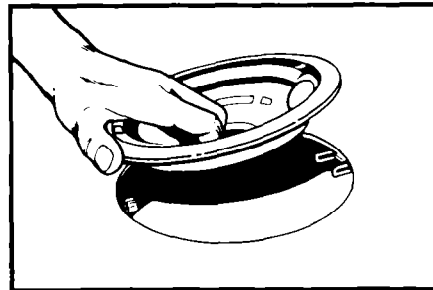

4. Lift out the reflector bowl. See "Cleaning Chart" on page 21 for cleaning instructions.


continued on next page

Replacing


⚠ WARNING

Burn, Electrical Shock and Fire Hazard


- **Make sure all surface units are OFF before replacing surface units and reflector bowls.** Failure to do so can result in burns or electrical shock.
- **Do not line the reflector bowls with foil.** Fire or electrical shock could result.

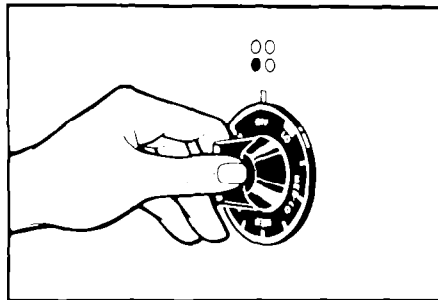


1. Turn off all surface units.

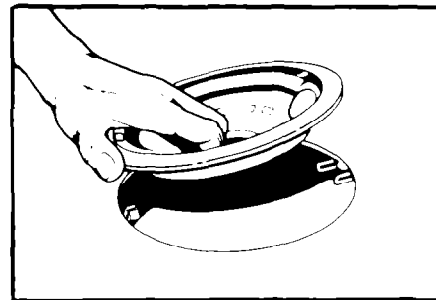

2. Line up openings in the reflector bowl with the surface unit receptacle and the element hold down clip.

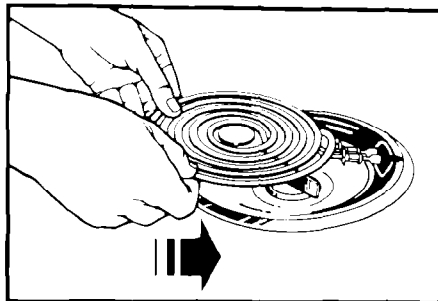

3. Hold the surface unit as level as possible with the terminal just started into the receptacle. Push the surface unit terminal into the receptacle.

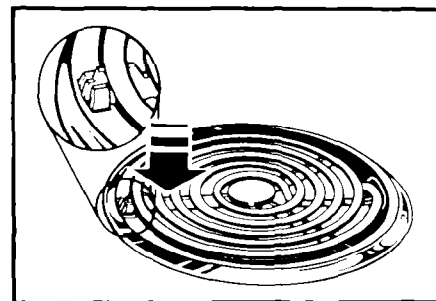

4. When terminal is pushed into the receptacle as far as it will go, push down the edge of the surface unit opposite the receptacle. The element hold down clip will keep the surface unit from moving around.

NOTE: Reflector bowls reflect heat back to the utensils on the surface units. They also help catch spills. When they are kept clean, they reflect heat better and look new longer.

If a reflector bowl gets discolored, some of the utensils may not be flat enough, or some may be too large for the surface unit. In either case, some of the heat that's meant to go into or around a utensil goes down and heats the reflector bowl. This extra heat can discolor it.


Lift-Up Cooktop

1. Lift front of cooktop at both front corners until the support rods lock into place.

⚠ WARNING

Personal Injury and Product Damage Hazard

- Be sure both support rods are fully extended and in the locked position. Failure to do so could result in personal injury from the cooktop accidentally falling.
- Do not drop the cooktop. Damage can result to the porcelain and the cooktop frame.

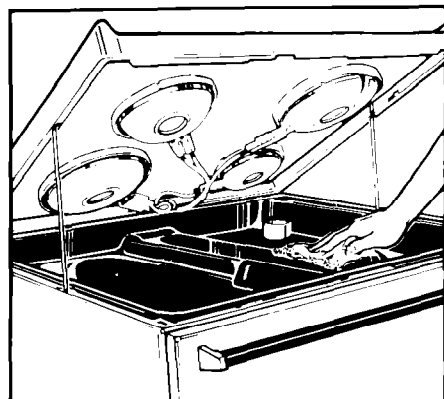

2. Wipe with warm, soapy water. Use a soapy steel wool pad on heavily-soiled areas.
3. To lower the cooktop, lift cooktop from both sides while pressing the support rods back to unlock them. Lower the cooktop into place.

The Oven Door

Removing the oven door will help make it easier to clean the oven.


⚠ WARNING

Burn and Electrical Shock Hazard

Make sure all controls are OFF and the oven is cool before removing oven door. Failure to do so can result in burns or electrical shock.

1. Open the door to the first stop position.
2. Hold the door at both sides and lift it at the same angle it is in.
3. To replace, fit the bottom corners of the door over the ends of the hinges.


Push the door down evenly. The door will close only when it is on the hinges correctly.

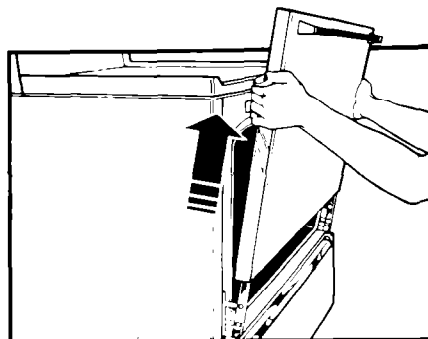


The Lower Panel

The lower panel can be removed to help make it easier to clean under the range and to check for installation of the anti-tip bracket.

To remove the lower panel:

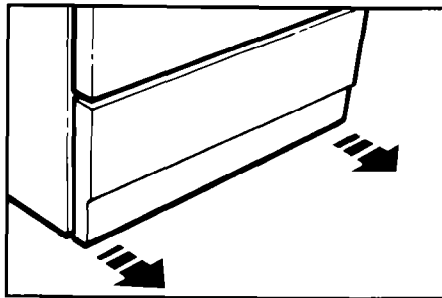


1. Pull out bottom of panel.

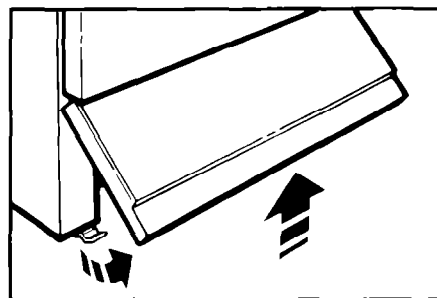


2. Slightly swing out and lift panel to remove from top clips.


To replace the lower panel:

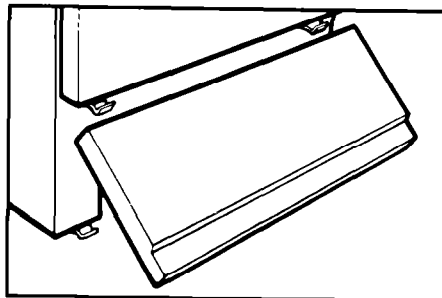

1. Place notches in top of panel over the top clips.

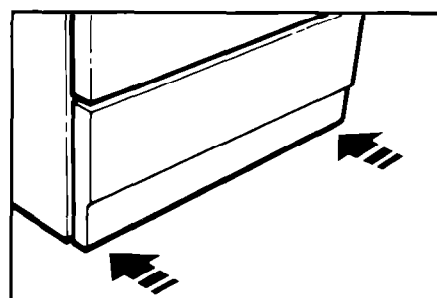

2. Swing down and push bottom of panel to secure bottom clips.

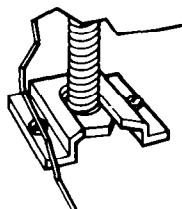

To verify the anti-tip bracket is engaged:

- Remove the lower panel.
- Look to see if the anti-tip bracket is attached to floor with screws.
- Make sure one rear leveling leg is positioned under the anti-tip bracket.
- See Installation Instructions for further details.

Standard Oven Cleaning

The Standard Oven has to be hand cleaned. Use warm soapy water, soapy steel wool pads or a commercial oven cleaner. See "Cleaning Chart" below for further instructions.

⚠ CAUTION

Do not allow commercial oven cleaner to contact the heating elements, thermostat, oven seal or exterior surfaces of the oven. Damage will occur.

Using Foil

To catch sugar or starch spills from pies and casseroles, place a small shallow pan or cookie sheet on the rack directly under the cooking container.

NOTE: Do not use foil or foil liner to cover the oven floor. Poor baking results could occur.

Cleaning Chart

PART	WHAT TO USE	HOW TO CLEAN
Exterior surfaces	Warm soapy water and a soft cloth. Non-abrasive plastic scrubbing pad for heavily-soiled areas.	<ul style="list-style-type: none"> • Wipe off regularly when range is cool. • Do not allow food containing acids (such as vinegar, tomato, lemon juice or milk) to remain on surface. Acids may remove the glossy finish. • Do not use abrasive or harsh cleansers.
Surface units	No cleaning required.	<ul style="list-style-type: none"> • Spatters or spills will burn off. • Do not immerse in water.
Chrome reflector bowls	Warm soapy water and a non-abrasive plastic scrubbing pad.	<ul style="list-style-type: none"> • Wash, rinse and dry well. • Clean frequently. • Do not use abrasive or harsh cleansers.
Control knobs	Warm soapy water and a soft cloth.	<ul style="list-style-type: none"> • Wash, rinse and dry well. • Do not soak.
Control panel	Warm soapy water or spray glass cleaner and a soft cloth.	<ul style="list-style-type: none"> • Wash, rinse and dry well. • Follow directions provided with the cleaner.
Oven rack	Warm soapy water or soapy steel wool pads.	<ul style="list-style-type: none"> • Wash, rinse and dry. Use soapy steel wool pads for heavily-soiled areas.

Standard oven

Warm, soapy water or soapy steel wool pads.

OR

Commercial oven cleaners.

Heavy-duty aluminum foil or shallow pan.

- Remove door for easier access.
- Clean heavily-soiled areas or stains. Rinse well with water.
- Remove door for easier access.
- Place newspaper on floor to protect floor surface.
- Follow directions provided with the oven cleaner.
- Rinse well with clear water.
- Use in well-ventilated room.
- **Do not allow commercial oven cleaners to contact the heating elements, oven seal, thermostat or exterior surfaces of the range. Damage will occur.**
- Place piece of foil or shallow pan, slightly larger than the cooking container, on rack under food to catch spill-overs.

If you need service or assistance, we suggest you follow these steps:

1. Before calling for assistance...

Performance problems often result from little things you can find and fix without tools of any kind.

If nothing operates:

- Is the power supply cord plugged into a live circuit with the proper voltage? (See Installation Instructions.)
- Have you checked your home's main fuses or circuit breaker box?

If the oven will not operate:

- Is the Oven Selector turned to a setting (BAKE or BROIL)?
- Is the Oven Temperature Control turned to a temperature setting?

If surface units will not operate:

- Have you checked your home's main fuses or circuit breaker box?
- Are surface units plugged in all the way?
- Do the control knobs turn?

If surface unit control knob(s) will not turn:

- Did you push in before trying to turn?

If cooking results aren't what you expected:

- Is the range level?
- Does the oven temperature seem too low or too high? See page 14.
- If needed, have you preheated the oven as the recipe calls for?
- Are you following a tested recipe from a reliable source?
- Are you using pans recommended in the "Cookware" section on page 7?
- If baking, have you allowed 1½ to 2 inches (4-5 cm) on all sides of the pans for air circulation?
- Are the pans the size called for in the recipe?
- Do the cooking utensils have smooth, flat bottoms and fit the surface elements being used?

2. If you need assistance*...

Call Whirlpool COOL-LINE® service assistance telephone number. Dial free from anywhere in the U.S.: 1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. Donald Skinner
Director of Consumer Relations
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

Please include a daytime phone number in your correspondence.

3. If you need service*...



Whirlpool has a nationwide network of authorized Whirlpool® service companies. Whirlpool

service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our COOL-LINE® service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD - ELECTRICAL APPLIANCES -
MAJOR - SERVICE & REPAIR MAJOR - REPAIRING & PARTS
OR
WASHING MACHINES, DRYERS
& IRONERS - SERVICING
WHIRLPOOL APPLIANCES
AUTHORIZED WHIRLPOOL SERVICE
SERVICE COMPANIES
XYZ SERVICE CO
123 MAPLE 999-9999

4. If you need FSP® replacement parts*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 3 above or call the Whirlpool COOL-LINE service assistance number in Step 2.

5. If you are not satisfied with how the problem was solved*...

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer or Whirlpool have failed to resolve your problem.

Major Appliance Consumer
Action Panel
20 North Wacker Drive
Chicago, IL 60606

- MACAP will in turn inform us of your action.

*When requesting assistance, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request.

WHIRLPOOL® RANGE PRODUCT WARRANTY

ER001

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized Whirlpool SM service company.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of the range product. 2. Instruct you how to use the range product. 3. Replace house fuses or correct house wiring or plumbing. 4. Replace owner accessible light bulbs. <p>B. Repairs when range product is used in other than normal, single-family household use.</p> <p>C. Pick up and delivery. This product is designed to be repaired in the home.</p> <p>D. Damage to range product caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p>	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your franchised Whirlpool distributor or military exchange.

If you need service, first see the "Service and Assistance" section of this book. After checking "Service and Assistance," additional help can be found by calling our COOL-LINE® service assistance telephone number, **1-800-253-1301**, from anywhere in the U.S.



®Registered Trademark/SM Service Mark of Whirlpool Corporation

Part No. 3150561

©1990 Whirlpool Corporation

Printed in U.S.A.

Ice Makers Dishwashers Built-In Ovens and Surface Units Ranges Microwave Ovens Trash Compactors Room Air Conditioners Dehumidifiers Autom:

